



SHUNGA
EROTIC ART

SOYO™

USER GUIDE
GUIDE D'UTILISATION
MANUAL DE USO
ANLEITUNG FÜR IHREN VIBRATOR
РУКОВОДСТВО ПО ИСПОЛЬЗОВАНИЮ

ENGLISH





| | |
|---|----|
| BEFORE THE VERY FIRST USE | 4 |
| DISCOVER YOUR STIMULATOR | 5 |
| USE YOUR STIMULATOR | 6 |
| SELECT ONE OF THE 10 VIBRATION MODES | 9 |
| ADJUST THE INTENSITY OF THE VIBRATIONS | 10 |
| TURN OFF YOUR STIMULATOR | 11 |
| LOCK / UNLOCK YOUR STIMULATOR FOR TRANSPORT | 12 |
| CHARGE YOUR STIMULATOR | 13 |
| CLEANING AND STORAGE | 14 |
| SAFETY | 15 |
| TROUBLESHOOTING | 16 |
| GENERAL INFORMATIONS | 17 |

THANKS FOR CHOOSING A SHUNGA PRODUCT!

SHUNGA is proud to present its new range of intimate massagers created to meet the needs of every woman. Several hours were spent on the drawing board to design elegant and luxurious toys that meet women's requirements in terms of ergonomics, vibration, quality and above all the achievement of pleasure. Our innovative, exclusive and refined designs will lead straight to the climax of sexual arousal; female orgasm.

CONTAINS:

- Intimate massager
- USB Charging cable (AC adapter not included)
- Satin pouch
- User guide in 6 languages
- Certificate of authenticity & warranty

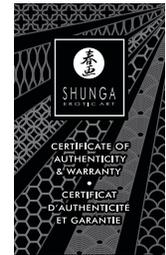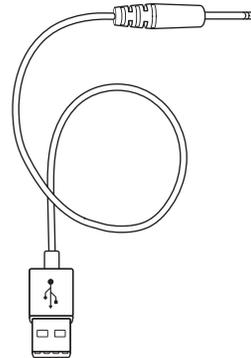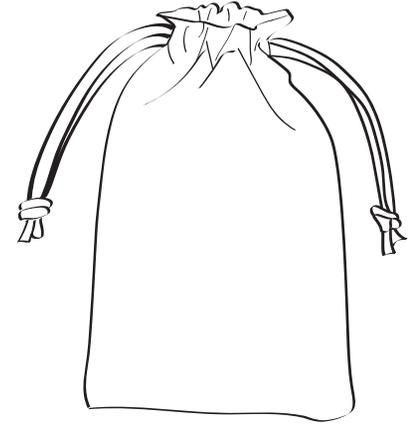
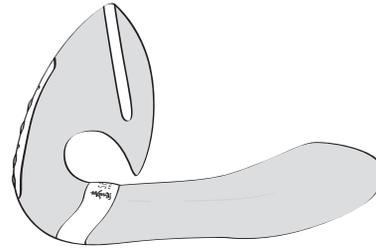


BEFORE THE VERY FIRST USE

IMPORTANT

CHARGE THE STIMULATOR FOR THREE HOURS BEFORE USING IT FOR THE FIRST TIME.

Connect the USB charging cable (included) to the charging port on the stimulator. Connect the cable to any USB port or USB/AC adapter (750mA to 3A - not included). To learn more about charging, refer to the section on **CHARGING YOUR STIMULATOR**.

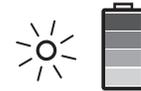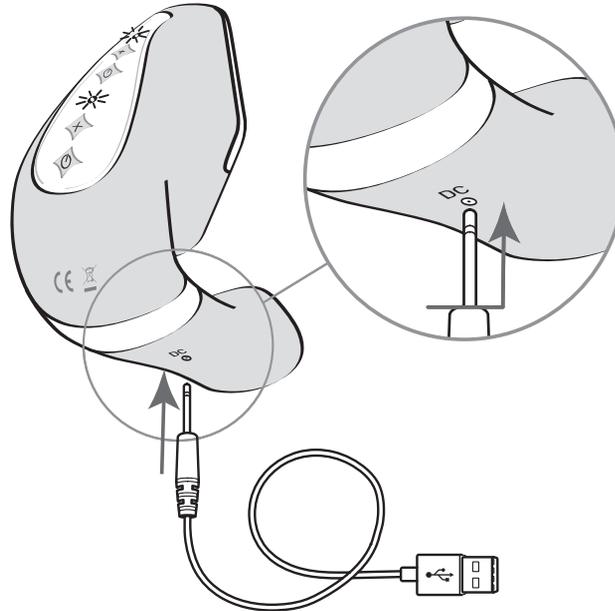

DISCOVER YOUR STIMULATOR



A ON / OFF button
Lock / Unlock fonction
Change vibration modes

B Intensity control button (+)

C Indicator light


1 Motor 1

2 Motor 2

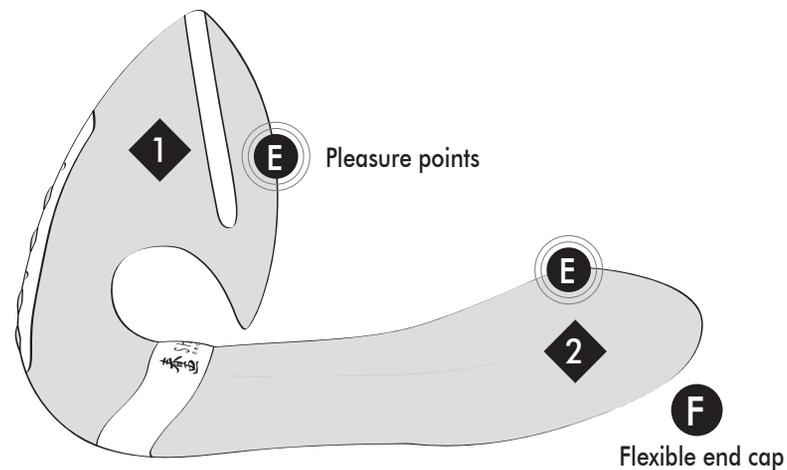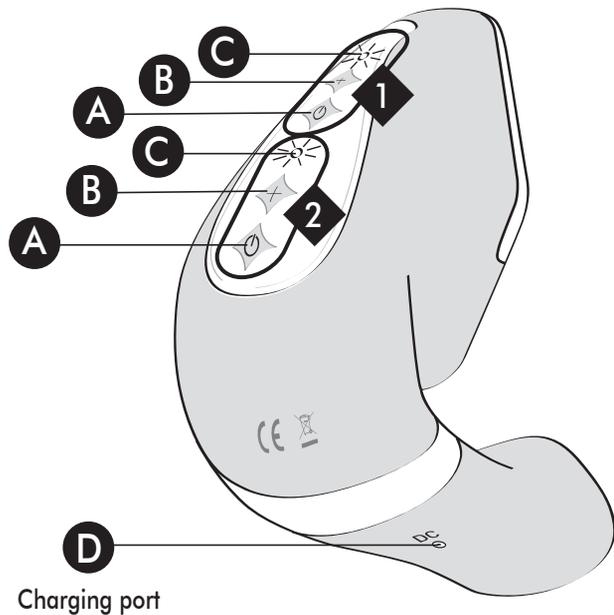


USE YOUR STIMULATOR


1. Clean your stimulator with SHUNGA toy cleaner or with water and mild soap. Rinse well and let air dry.

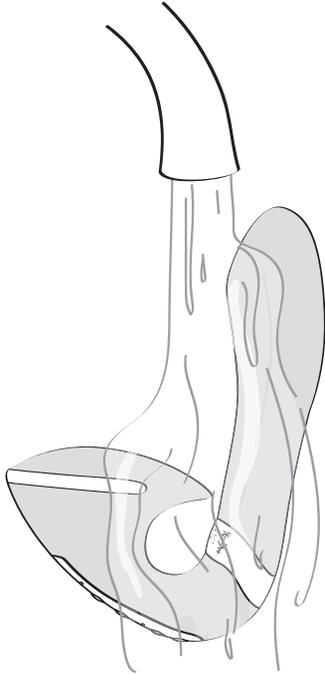

2. For maximum comfort and pleasure, apply a small amount of SHUNGA TOKO AQUA water-based lubricant.

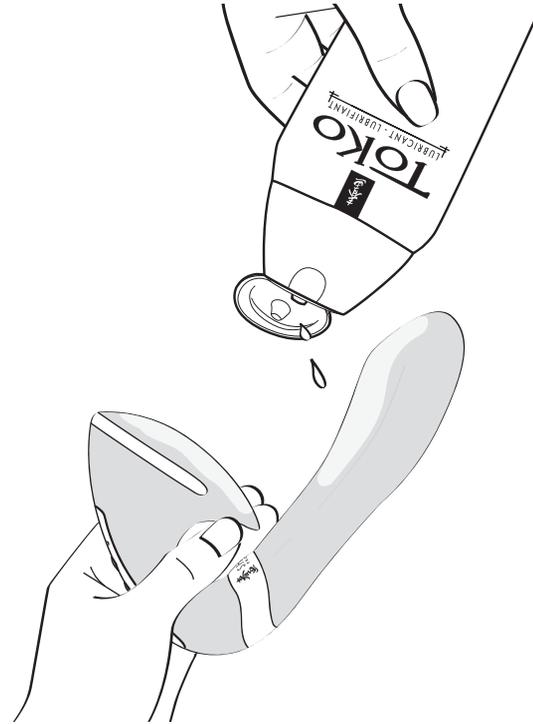





USE YOUR STIMULATOR

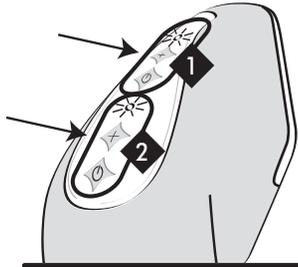

The SOYO stimulator has independent control for the upper and lower motor.


4. To switch between modes, press the power button (1-A) and/or (2-A) again briefly. To learn more about vibration modes, refer to the section **SELECT ONE OF THE 10 VIBRATION MODES** of this guide.

3. To start either of the motors, press and hold the power button (1-A) and/or (2-A) for **3 seconds** until you feel vibrations and see the colored indicator light turns on.
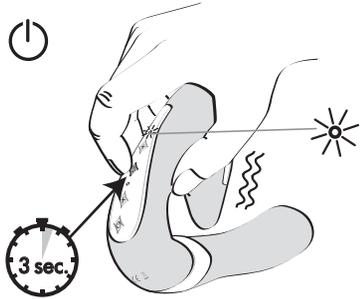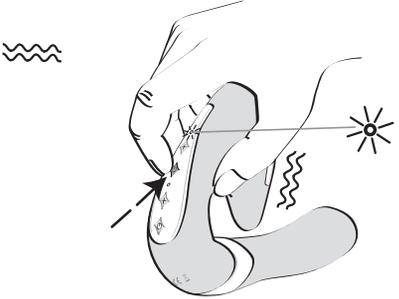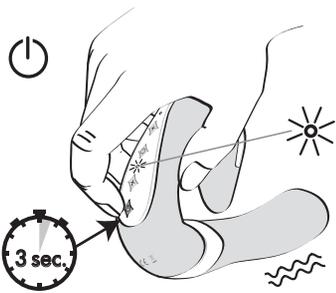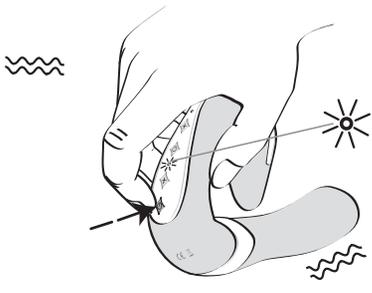
| | | |
|--|--|--|
|  |  |  |
|  |  |  |

USE YOUR STIMULATOR

6. Explore the different ways to position your stimulator.

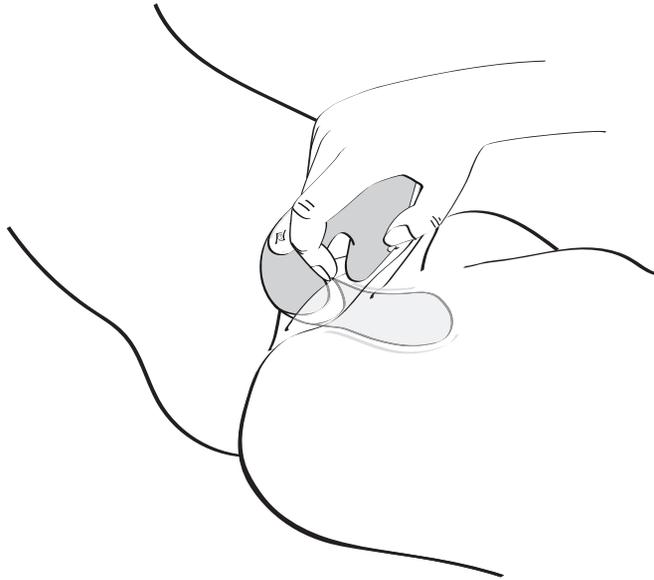


7. Adjust the vibration mode (1-A)(2-A) and intensity (1+)(2+) and enjoy your stimulator.



SELECT ONE OF THE 10 VIBRATION MODES

Press the power buttons (1-A and/or 2-A) again briefly to switch between modes. You will see the indicator light change color according to the different modes.

Each vibration mode corresponds to a color, so it's quick and easy to find your favorite one! For each of the 10 modes, it is possible to adjust the intensity of the vibrations up to 5 levels.

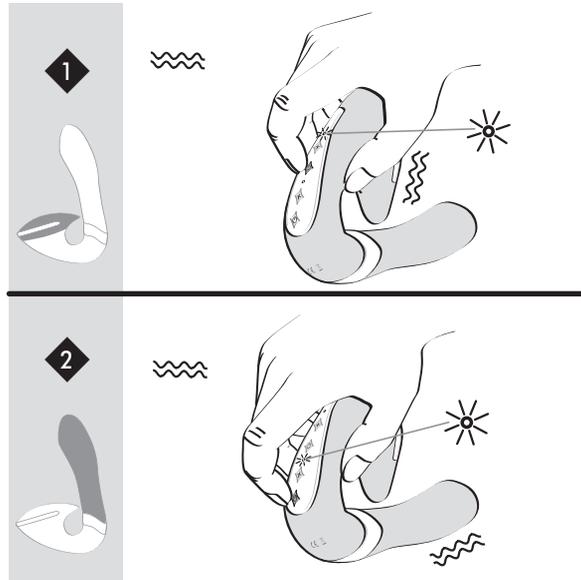


| | | | |
|---|-----------------------|----------------------|---|
|  | 1-FUCHSIA | CONTINUOUS VIBRATION |  |
|  | 2-BLUE | WAVES |  |
|  | 3-GREEN | SHIVERS |  |
|  | 4-PURPLE | CHA CHA CHA |  |
|  | 5-AQUA | LEVELS |  |
|  | 6-ORANGE | BOUNCES |  |
|  | 7- LIGHT GREEN | LOW TIDE |  |
|  | 8-PINK | HIGH TIDE |  |
|  | 9-YELLOW | PULSE |  |
|  | 10-RED | ECHO |  |

ADJUST THE INTENSITY OF THE VIBRATIONS

Using the control buttons (1+ and/or 2+) adjust the vibrations up to 5 intensity levels.


By default, when you turn on your stimulator, it will be at the lowest intensity. Briefly press the control buttons (1+ and/or 2+) to increase the intensity up to 5 levels. Continue to press briefly to repeat the cycle.

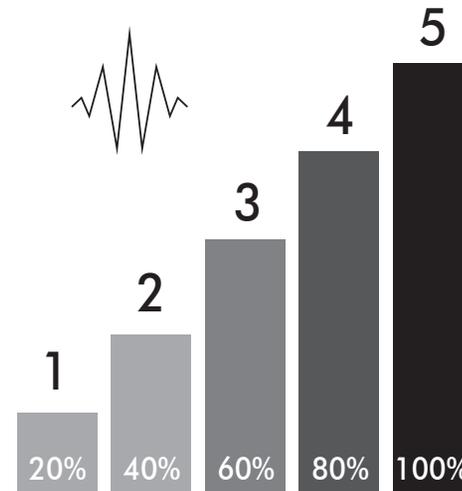

TURN OFF YOUR STIMULATOR

Press and hold the power buttons (1A and/or 2A) for **3 seconds** until the indicator light flashes twice and turns off.

- If during use the indicator light turns red and flashes, this indicates that your battery is getting low. Your stimulator will need to be recharged before its next use.

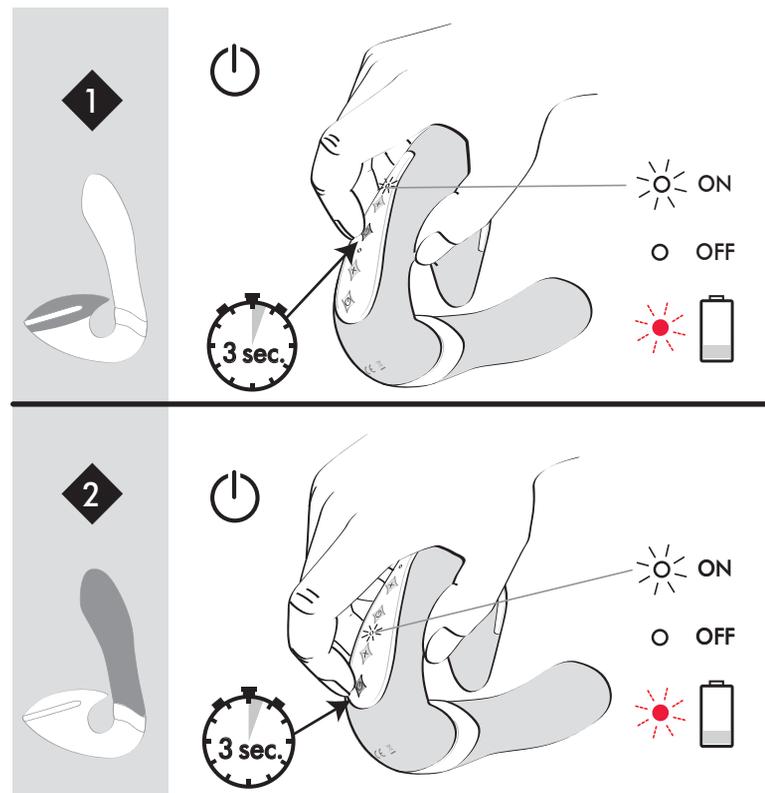


LOCK / UNLOCK YOUR STIMULATOR FOR TRANSPORT

Lock your stimulator

To lock your stimulator, press and hold the power button (1 and/or 3) **for 8 seconds** until you feel two short vibrations and see the white light blink four times.


Your stimulator is now locked.

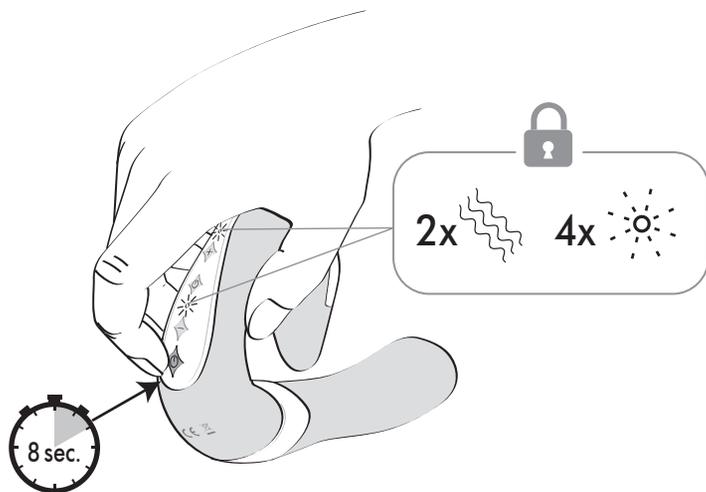

Unlock your stimulator

To unlock your stimulator, press and hold the power button (1 and/or 3) **for 8 seconds** until you feel two short vibrations and see the white light blink twice.

Your stimulator is now unlocked.

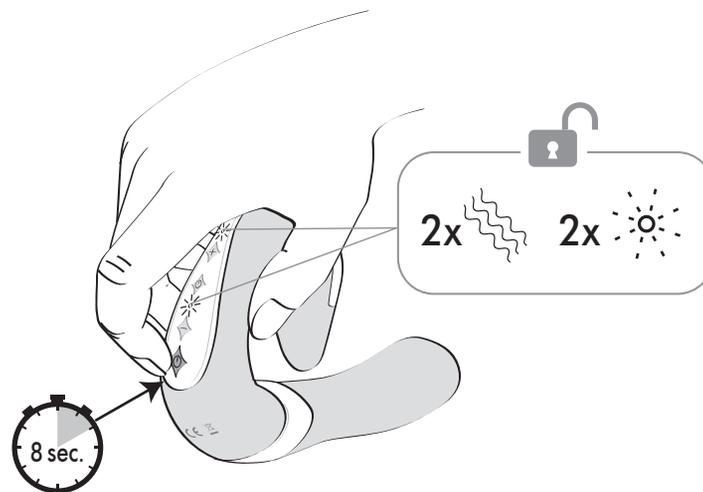


CHARGE YOUR STIMULATOR

- Wash and dry your device thoroughly before charging.
- Connect the tip of the charging cable (included) to the charging port on the back of the stimulator. Connect the USB end of the cable to any USB port or USB/AC adapter (750mA to 3A - not included).

NOTE: If you use a USB port, your stimulator will not charge if your computer/TV goes into standby mode.

- Use **ONLY** the original cable provided by SHUNGA to charge your stimulator.
- When your stimulator is properly plugged in, the indicator light will flash rapidly every few seconds until fully charged (approximately 2.5 hours). **Charging the battery for the first time may take up to three (3) hours.** When your stimulator is fully charged, the indicator light will stop flashing and stay lit.
- A full charge lasts up to 1 hour at full power or up to 3 hours at low power.
- To maximize the life of the battery, we recommend that you disconnect your stimulator as soon as it has reached full charge.
- If your stimulator has been discharged for a long period of time, the charging indicator light may take several minutes to come back on.
- You can recharge your stimulator even if it is not fully charged.


- The charge of your stimulator will be maintained for **approximately 6 months**, however, it will gradually decrease over time. In order to maximize the performance and life of your battery, it is preferable to recharge your stimulator **BEFORE** the power of the vibrations decreases considerably.
- Never use the stimulator while it is in charging mode.

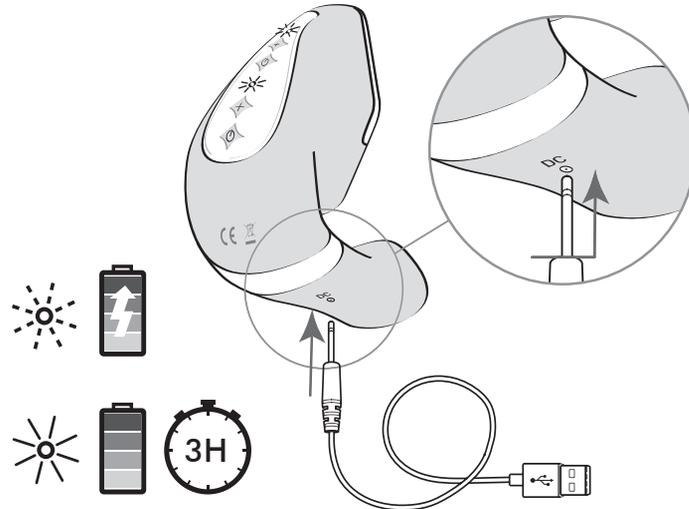

CLEANING AND STORAGE


Before each cleaning, make sure the stimulator is disconnected from its charge.

- Always clean your stimulator thoroughly **before and after each use**. The device is completely waterproof and submersible in water, making it easy to maintain. Careful and regular cleaning will prolong its life.
- Clean your stimulator with SHUNGA toy cleaner or mild soap and water. Rinse with warm, clear water and air dry. **Never use cleaners that contain alcohol, petroleum or acetone.**
- Once dry, store your stimulator in its box or in its carrying pouch (included). Keep it away from other stimulators in a dust-free area.

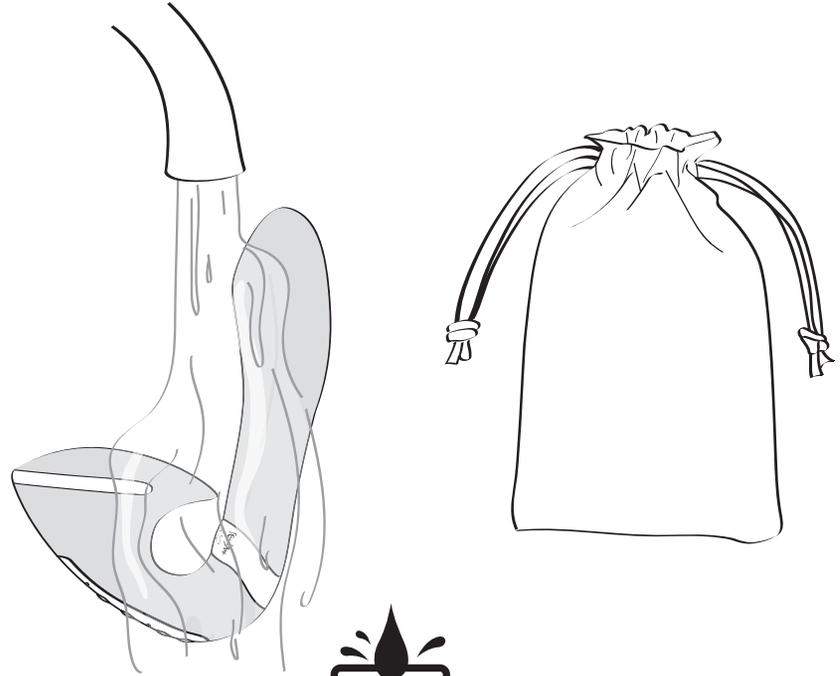

SAFETY

- **Do not use silicone-based lubricants** or any other products containing silicone.
- Do not over stretch or bend unevenly the moving part of the stimulator.
- Keep your stimulator away from cold temperatures or extreme heat and avoid exposing it to direct sunlight.
- Do not place your stimulator in a microwave oven, dishwasher, or oven. Do not boil.
- Use **only** the USB charging cable provided with the stimulator.

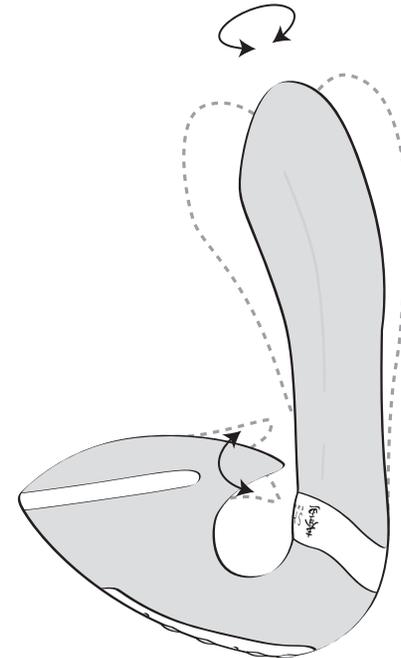

TROUBLESHOOTING

The stimulator light does not flash while the toy is connected to the charging cable

- Check that the charging cable is properly connected and fully inserted into the stimulator's port and the charging port or wall outlet.
- If your stimulator has been left uncharged for a long period of time, the charging indicator light may take several minutes to come on

Your stimulator does not turn on when you press the on/off button for 3 seconds

- The battery is discharged. Recharge your stimulator.
- Your stimulator is locked.
Press the power button (1A and/or 2A) **for 8 seconds** until you feel two short vibrations and see the light blink twice.

Then, press and hold the power button (1A and/or 2A) **AGAIN for 3 seconds** until you feel vibrations and see the indicator light turns on.

If you are experiencing other problems with your device or would like to know more about how it works, please visit our website at www.shunga.com or contact our customer service department : support@shunga.com.

GENERAL INFORMATIONS

PRODUCT SPECIFICATIONS

| | |
|------------------------------|--|
| MATERIALS | Silicone and ABS plastic |
| COLORS | Black, Pink, Purple, Raspberry |
| INTERFACE | 4 buttons, USB |
| POWER OFF | Manual |
| SOUND LEVEL | 40 dB |
| BATTERY | Lithium ion 500mAh 3.7V Rechargeable |
| CHARGING VOLTAGE | 5V |
| CHARGING TIME | About 2.5h |
| OPERATING TIME | Between 1 h (at maximum power) and 3 h (at low power) |
| STANDBY AUTONOMY | Up to 6 months |
| DIMENSIONS | 170 x 110 x 38 mm |
| INSERTABLE LENGTH | 110 mm |
| WEIGHT (Product only) | 196 g / 0.43 lbs |

PRODUCT FEATURES



- System with two ultra powerful, high performance and silent motors.
- Completely waterproof (IPX7) and submersible in water for easy and hygienic maintenance.
- Made of medical grade, hypoallergenic silicone, safe for the body. **No phthalates, BPA or natural rubber latex.**
- Refined, unique and avant-garde design, specifically conceived and studied for female pleasure. Suitable for beginners as well as the more experienced.
- Designed to stimulate the erogenous zones of the body in an efficient and optimal way.
- Simple interface with four user-friendly control buttons and indicator light identifying the different vibration modes.
- Complies with European Union CE standards.

GENERAL INFORMATIONS

TO AUTHENTICATE YOUR SHUNGA PRODUCT

To authenticate your SHUNGA intimate massager, register the number on the SHUNGA Authenticity Card at SHUNGA.COM AUTHENTICATION.

WARRANTY

SONGEX INNOVATIONS INC. warrants this stimulator for a period of one (1) year from the date of purchase, against manufacturing defects only. The warranty covers the mechanical parts that operate the stimulator. It does NOT cover: cosmetic damage due to misuse, accident or lack of maintenance. No other warranty is expressly or impliedly provided. The warranty is void if the stimulator or its accessories have been opened or attempted to be opened. In the event of a warranty claim, the user's only recourse is to replace the stimulator. This condition is in addition to the status of the consumer's right and does not restrict it in any way.

Need help with one of our products? Contact us by email at support@shunga.com or visit our website www.shunga.com. No medical claims related to the use of this product are implied or guaranteed.

WASTE DISPOSAL

This product should not be considered as household waste and its disposal is subject to the regulations on the disposal of used electronic products (applicable to the European Union and other European countries with different waste collection systems). The  icon means that this product should be taken to an appropriate collection point that recycles electrical and electronic equipment. We encourage you to use the recycling systems when your product has reached its end of life. For more information, please contact the local authority responsible for waste collection in your area.

COMPLIANCE

This stimulator is intended for indoor use at temperatures between 10°C and 45°C. This Class B digital device complies with Canadian ICES-003. This device complies with Part 15 of the FCC Rules and meets Industry Canada's license-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation. This product complies with the essential requirements of Directives 2006/95/EC, 2004/108/EC, 2011/65/EU and 1999/5/EC. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. For more information on compliance, visit www.shunga.com.

GENERAL INFORMATIONS

WARNINGS

1. **IMPORTANT** : Keep out of reach of children. This stimulator is sold as an adult accessory and is not intended for use by children.
2. If you are pregnant, have diabetes, phlebitis, thrombosis, a pacemaker, or any other special condition, ask your physician about the risk of blood clots before using an intimate stimulator.
3. This device is not a medical device with medical or other curative effects. It is not intended for medical use.
4. Remove any jewelry or piercings from the intimate area before use.
5. Do not use on irritated, swollen or damaged skin. If pain or discomfort occurs during use, discontinue use immediately.
6. Do not use the stimulator on the neck area.
7. This stimulator may produce slight heat in the motors area when used for long periods or when the toy is in charging mode.
8. Do not turn on the stimulator or recharge it if it becomes abnormally hot (over 45°C) or if it is mechanically damaged, deformed or discolored.
9. Risk of injury from defective batteries. Improper use or handling of the device may cause an uncontrolled exothermic reaction of the batteries. If this happens, please take the necessary steps to dispose of your device properly and safely.
10. Do not throw the device into a fire.
11. Do not open or attempt to open or insert any sharp object into the device.
12. Protect your stimulator from cold temperatures or extreme heat and avoid exposing it to direct sunlight.
13. A change in ambient temperature may cause condensation on your stimulator. If this happens, turn off your stimulator and wait until the toy has reached room temperature before charging or using it.
14. If a spark or fire occurs, do not attempt to extinguish it with water.
15. Risk of injury from electric shock. When charging, avoid contact with any liquid substance.
16. The battery protection circuit prevents overcharging or total discharge of the unit.
17. Unplug your stimulator as soon as it has reached full charge. Also disconnect the wire from the electrical supply to avoid damage.
18. Risk of damage from magnetic fields. Magnetic fields can affect the mechanical and electronic components of certain devices such as pacemakers. In this case, contact your physician before using this device. Do not leave cards with magnetic strips (i.e. bank cards, credit cards, etc.) near the device, as the magnets on the toy may damage them.

GENERAL INFORMATIONS

EXCLUSION OF LIABILITY

The user of this stimulator does so at their own risk. SONGEX INNOVATIONS INC. and your seller/distributor disclaim all liability and accept no responsibility for its use. The model may undergo improvements at any time without notice.

For information on patents, designs and pending patent and design applications in the United States, Canada, Europe, Australia, China, Mexico, South America and Russia, visit www.shunga.com.

SUPPORT : support@shunga.com

DESIGNED AND DEVELOPED IN CANADA. MADE IN CHINA. PATENT DESIGN AND COPYRIGHTS ARE OWNED BY EAU ZONE OILS & FRAGRANCES LTÉE. USED UNDER LICENCE.

DESSINÉ ET DÉVELOPPÉ AU CANADA. FABRIQUÉ EN CHINE. LE BREVET DE CONCEPTION ET LES DROITS D'AUTEUR SONT LA PROPRIÉTÉ DE EAU ZONE HUILES ET FRAGRANCES LTÉE. UTILISÉ SOUS LICENCE.

PRODUCTO DISEÑADO Y DESARROLLADO EN CANADÁ. FABRICADO EN CHINA. EL DISEÑO Y APARIENCIA DE ESTE PRODUCTO Y SU EMPAQUE ES UNA MARCA REGISTRADA DE EAU ZONE OILS & FRAGRANCES LTÉE. USADO BAJO LICENCIA.

IN KANADA ENTWORFEN UND ENTWICKELT. HERGESTELLT IN CHINA. PATENTDESIGN UND URHEBERRECHTE SIND EIGENTUM VON EAU ZONE OILS & FRAGRANCES LTÉE.

СПРОЕКТИРОВАНО И РАЗРАБОТАНО В КАНАДЕ КОМПАНИЕЙ. ИЗГОТОВЛЕНО В КИТАЕ. ДИЗАЙН И ВНЕШНИЙ ВИД ИЗДЕЛИЯ И ЕГО УПАКОВКИ ЯВЛЯЮТСЯ ЗАРЕГИСТРИРОВАННЫМ ТОВАРНЫМ ЗНАКОМ EAU ZONE OILS & FRAGRANCES LTÉE.



EAU ZONE H&F LTÉE / SONGEX INNOVATIONS INC., MONTRÉAL CANADA H4N 2S7
COMINTES, 10 RUE AMPÈRE, 95500 GONESSE FRANCE - INFO@SHUNGA.COM
© 2000 SHUNGA™ © 2021 SOYO™ WWW.SHUNGA.COM #GUID-400 V-22305